
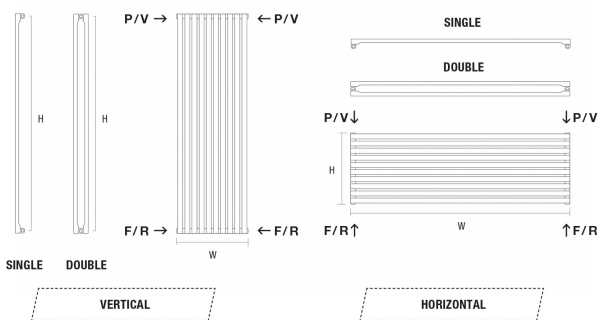


Please unpack your delivery carefully and inspect the radiator and contents – any damages or shortages must be notified to your supplier within 3 days of delivery of your goods.

Inside your accessories box you will have - 4 wall brackets, 4 plastic sleeves

**TECHNICAL INFORMATION**  
**STANDARD CONNECTIONS 1/2"**      **F = Flow**      **P = Plug**  
                                                                                  **R = Return**      **V = Vent**

**PIPE CENTRES**  
**Vertical** = radiator width + valves  
**Horizontal** = radiator width - 35mm

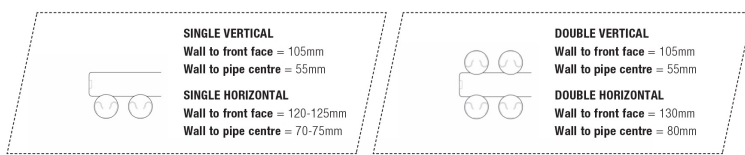

Materials	Steel
Connections	½" Flow and Return
Test Pressure	6 Bar
Testing Authority	EN442
Max operation pressure	4 Bar

Max working temperature 90c

These can be cleaned using a soft damp cloth with a non-abrasive cleaning product.

**INSTALLATION and FIXING**



The fixing positions for the top 2 brackets are measured at 93mm in from each end of the top collector and measured down 140mm. In order to accurately mark the bottom bracket fixing positions we suggest you mark, fix and level the top 2 brackets first. Then hang the radiator, ensuring it is vertically level and manually hold the bottom brackets in position while marking. Then using suitable drill bit fix the brackets ensuring that all brackets are level.

There is a diverter which is shown by a small indentation on the underside of one of the collectors. When fitting the radiator, the indentation must be at the bottom to ensure the water will flow correctly.

With the brackets firmly fixed, level and the plastic sleeves fitted and the diverter at the bottom the radiator is lowered directly onto the brackets.

**PLEASE NOTE:** That in accordance with Part L1 2006 of the Building Regulations and BS7593:1992 code of practice for the treatment of hot water and central heating systems, we recommend flushing the heating