



Check the bearing surface for load-carrying capacity.
 For safety reasons wall plugs and screws aren't delivered.
 Contact your dealer for the right type of screws / plugs.
 Observe special requirements for e.g. public buildings.

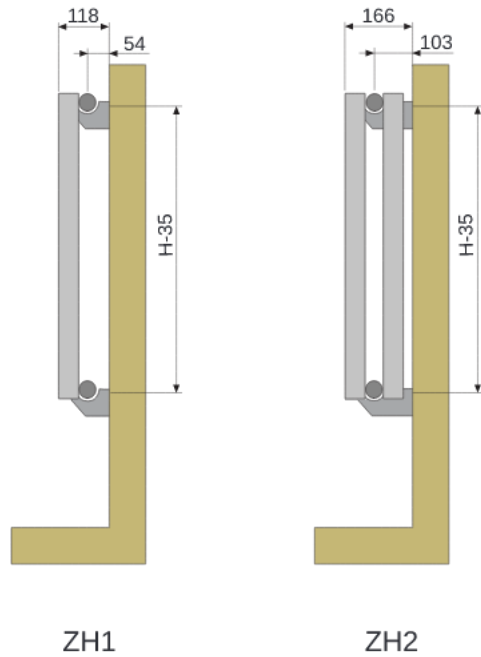

ZH1

ZH2

Operating pressure : Max.4bar

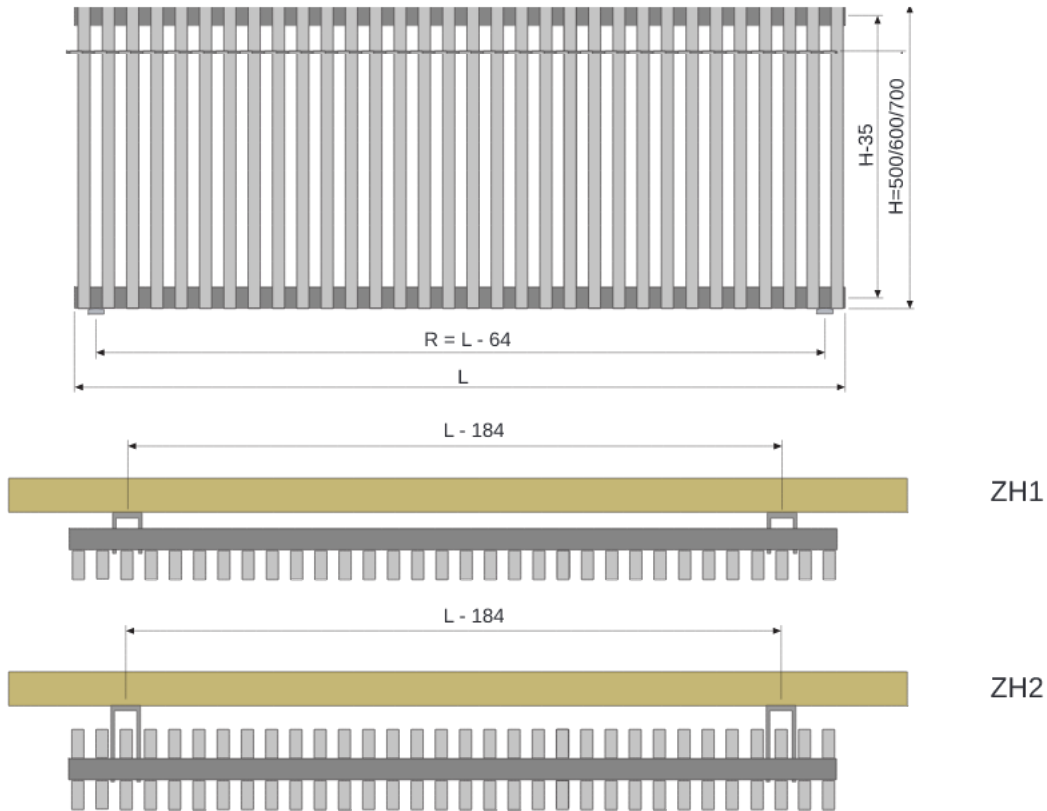

ZH1

ZH2